
## 外型尺寸表


**Outside dimension table** 

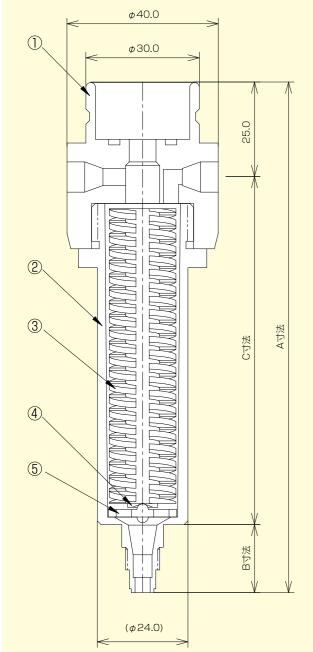

Model	SNP-S	SNP-M	SNP-L	SNP-XL
A尺寸(mm)	92	109	135	161
B尺寸(mm)	18	18	18	18
C尺寸(mm)	49	66	92	118
內容量(ml)	6.5	8.5	12.5	16.5

部品名	材質 Material	
①連接頭	Joint head	TPR
②Mixer case	Mixer case	PP
③攪拌旋轉棒	Main rotor	PP
④尖軸承	Bearing tip	PP
⑤板軸承	Bearing plate	PP

**SNP Unit** 

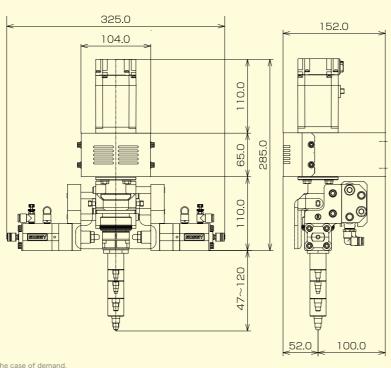

注意事項

·They are not explosion prevention and waterproofing specification. Please ask in the case of demand.

· Please note that the specifications may be changed without notice.

※本機無防水、防爆功能。若有此需求,請與我們聯絡。

※機種的規格、外觀等更改之際,恕不另行通知。

### SOSEY

### 日本ソセー工業株式会社

〒457-0068 名古屋市南区南野1-99 TEL(052)612-7321(代) FAX(052)611-2011 本社工場

〒108-0023 東京都港区芝浦2丁目8-14 第2AKビル1F・3F TEL(03)3455-7141(代) FAX(03)3455-7256 営業本部&LAB.

名古屋営業所

〒457-0068 名古屋市南区南野1-99 TEL(052)613-2511 FAX(052)613-2539


〒532-0011 大阪市淀川区西中島6-9-27 新大阪メイコービル102 大阪営業所&LAB. TEL(06)6303-7141(代) FAX(06)6306-4544

URL http://www.sosey.co.jp/

TEL(021)6763-1508


TEL (02) 952-4824 FAX(02)952-4829 TAIWAN TEL (02) 2634-8262 FAX (02)2634-8350 TEL(858)427-0688 FAX(818)459-3908

●ご用命は下記へ

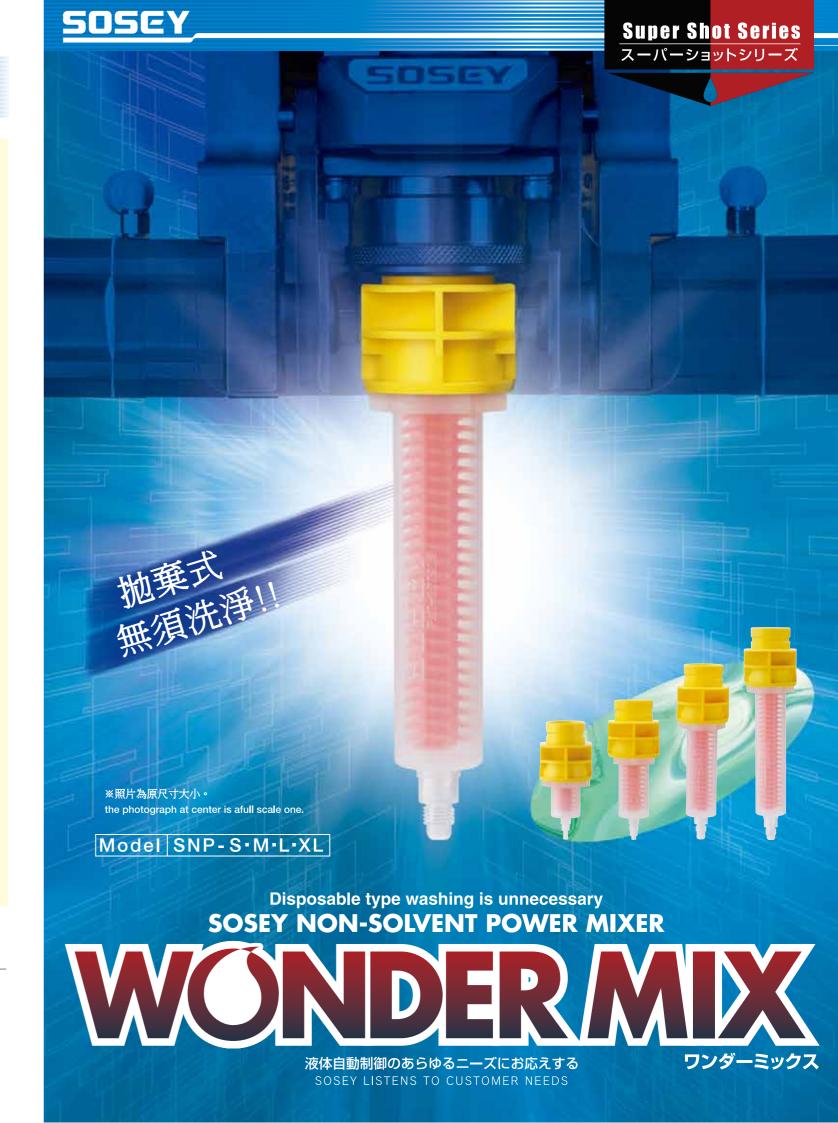

## SNP組合內容

**Contents SNP Unit** 

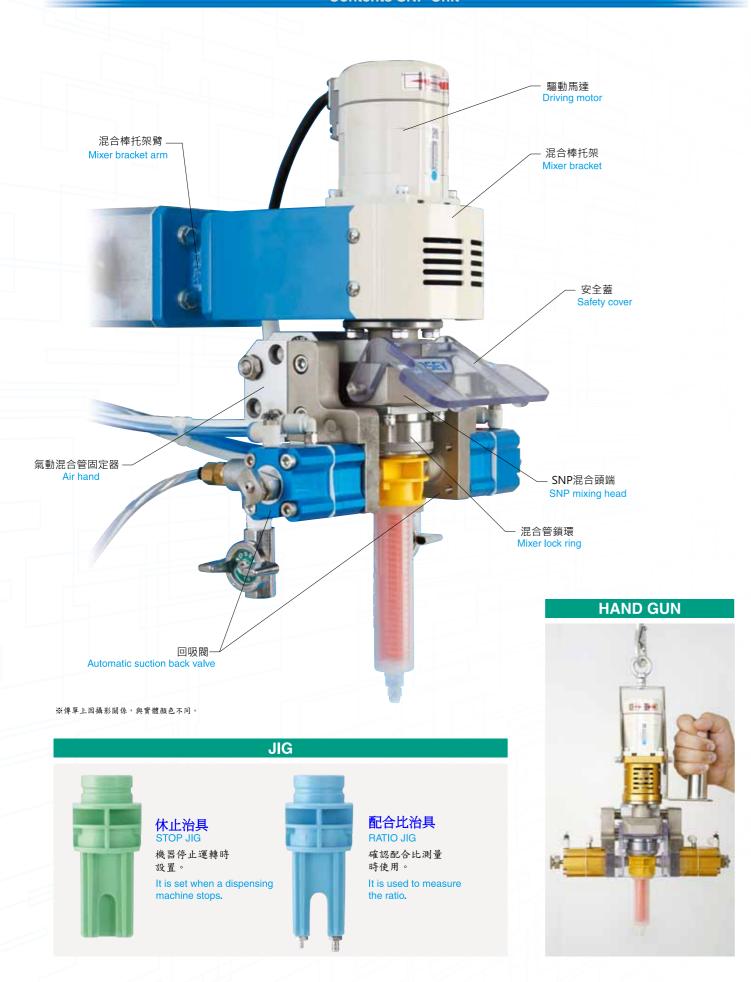

# SNP組裝方法


Method of installing SNP





混合管凸出部(key)與混合頭端凹進部(key)部對照後,將六角形旋轉棒插入混合館內。


Fit the SNP mixer key into the key way of the mixing head, and insert the hexagon shaft into the mixer.

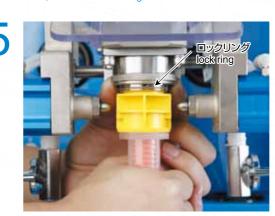


將混合管插入後,混合管鎖環向下拉。 Push the hexagon shaft inserted upward with keeping the state arranged, and slide the mixer lock ring downward.



裝上混合管專用O-ring。 The exclusive use O ring is fixed to the mixer.

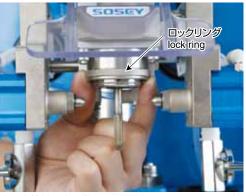

 將混合管鎖環向上推。 Slide the mixer lock ring upward.



安全蓋蓋上後,按下Mixer lock 鍵按下後完成。(控制螢幕上) Lower the safety cover, and push the mixer lock switch. Then, the process of installing SNP is completion. (control panel)